




INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
INSTRUCTIONS FOR ASSEMBLY
INSTRUCCIONES DE MONTAJE

SAF-INSIDE

PORTE ENTRE-CLOISONS: 1 VANTAIL MOTORISE
KASTENRAHMENSYSTEM FÜR SCHIEBETÜR : 1 HANDTÜRFLÜGEL
POCKETDOOR – 1 MOTORIZED LEAF
PUERTA ENTRE TABIQUE : 1 HOJA MOTORIZADA

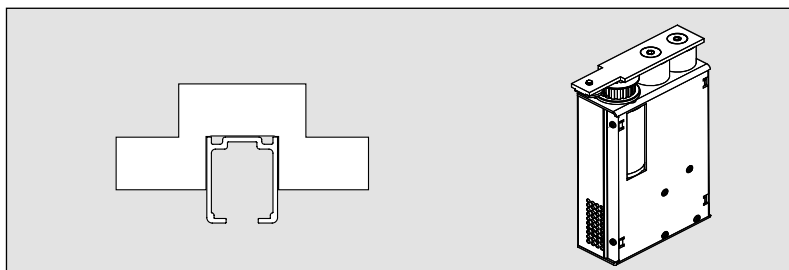

Poids maximal des panneaux
Maximales Gewicht
Maximum weight
Peso máximo por hoja


80 Kg

Epaisseur des panneaux
Ladendicke
Shutter thickness
Espesor de las hojas

40 mm





COMPOSITION - ZUSAMMENSETZUNG - COMPOSICIÓN

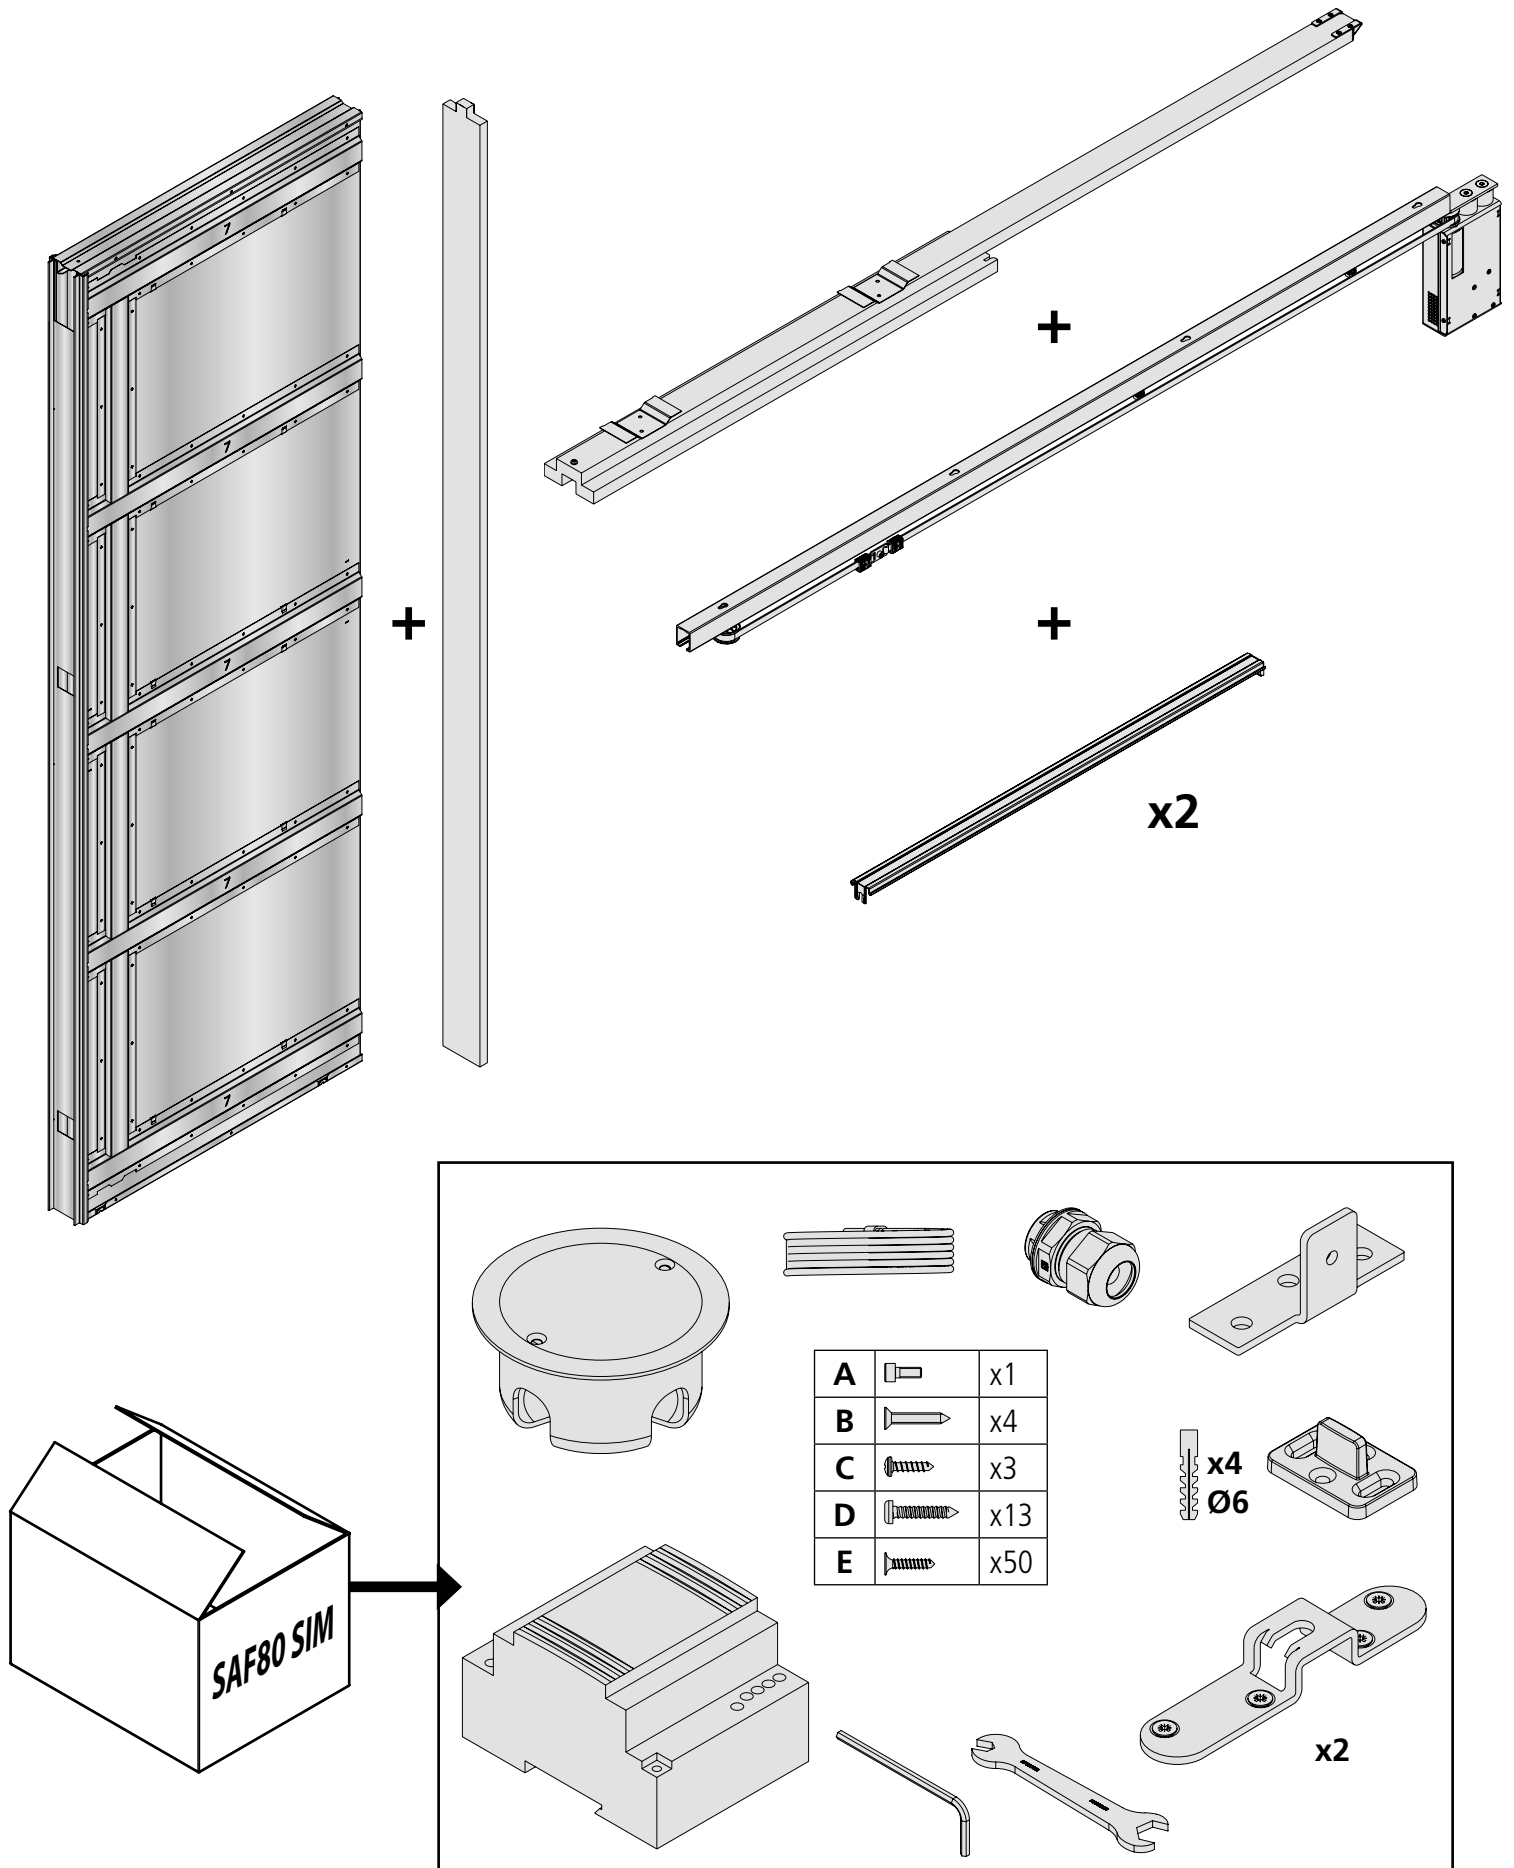

ENCOMBREMENT / ABMESSUNGEN
DIMENSIONS / VOLUMEN


Ref. / Art.Nr Item Nr	LT (mm)	LO (mm)
SAF-INSIDE70M	1610	695
SAF-INSIDE80M	1810	795
SAF-INSIDE90M	2010	895

dimensions des portes Abmessungen von Türen dimensions of doors Dimensiones de las puertas	
L (mm)	W (mm)
730	2040
830	2040
930	2040

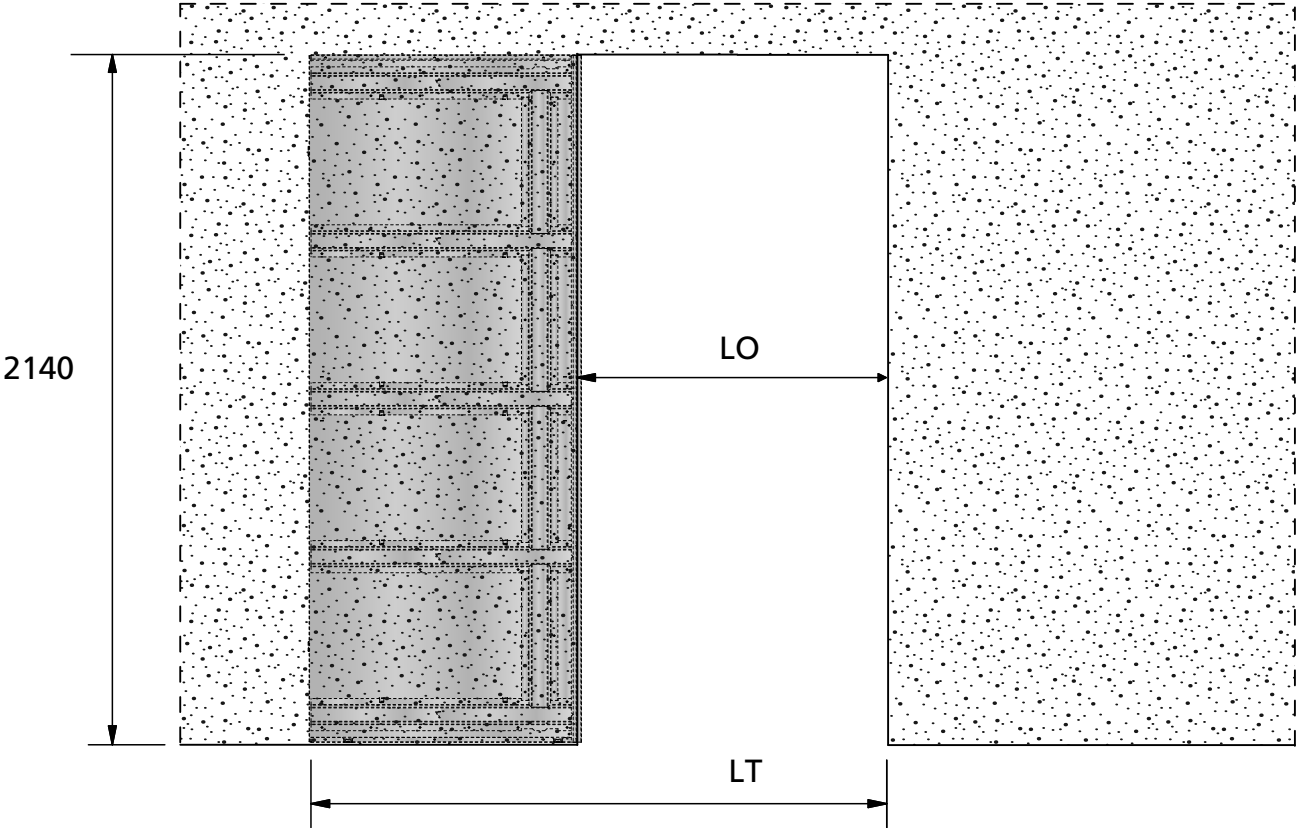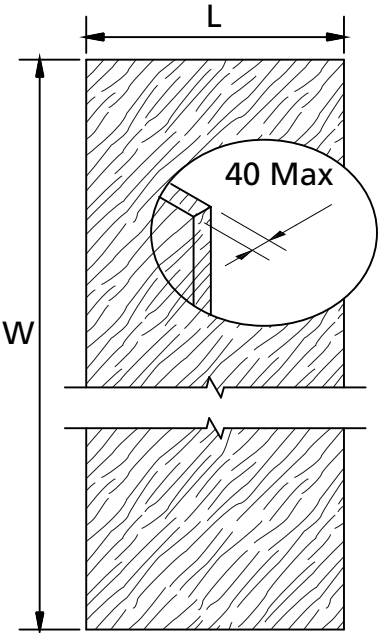


IMPORTANT: Produit destiné à une utilisation en intérieur. Ne pas installer dans des endroits humides.
WICHTIG: Dieses Produkt ist nur für Innenanwendung geeignet.
 Nicht in feuchten Atmosphären verwenden
WARNING: For indoor use only. Do not install in humid places
IMPORTANTE: Producto con destinación en el interior. No instalar en lugares húmedos


1.

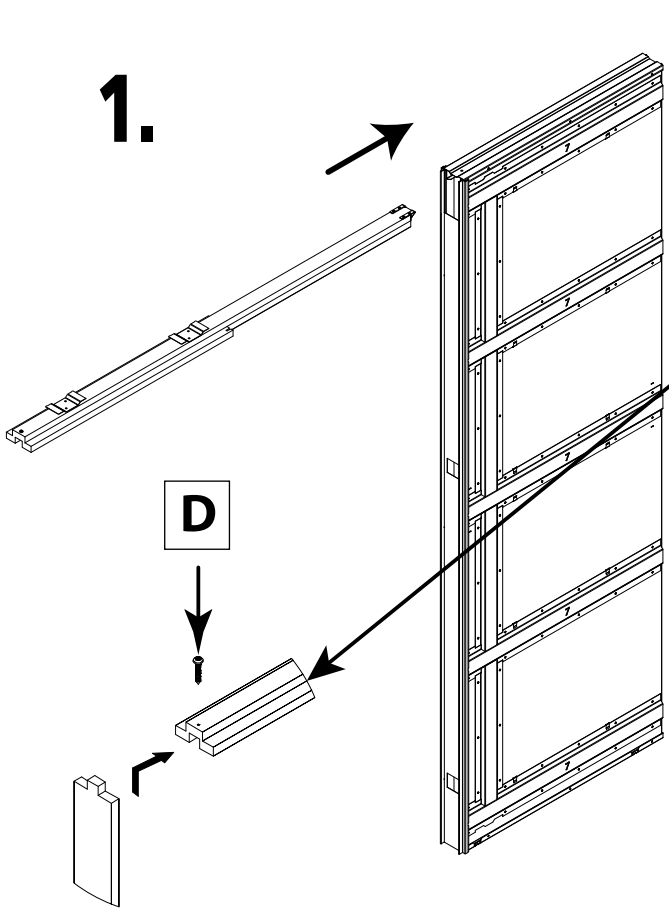


2.

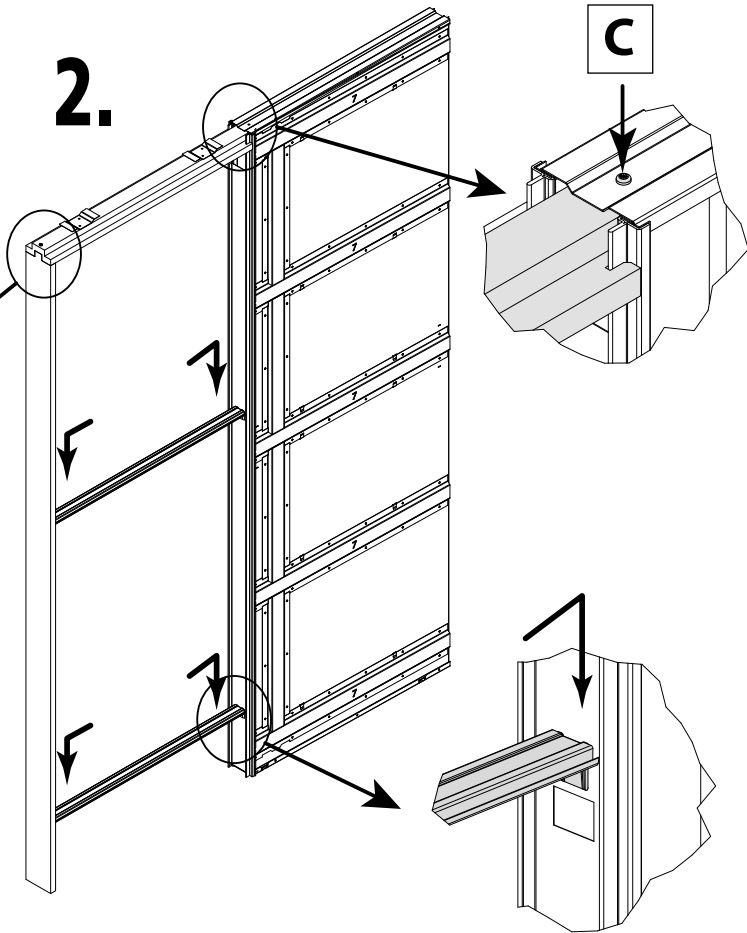


3.

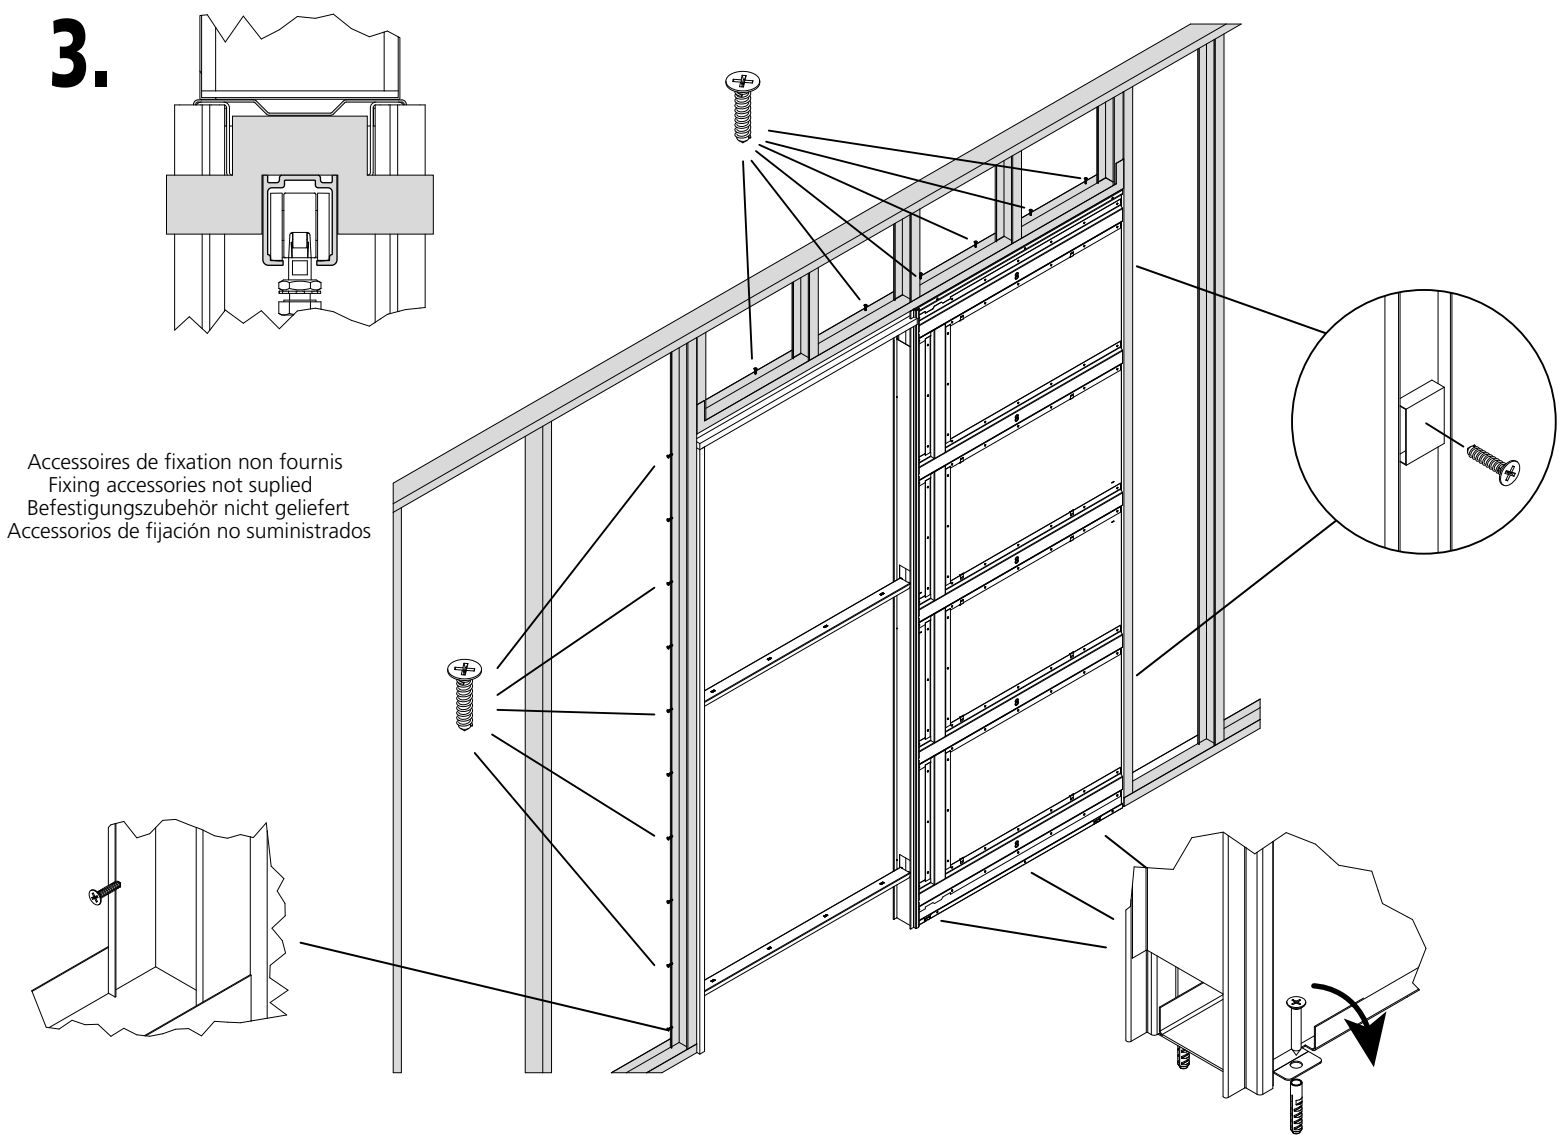


4.

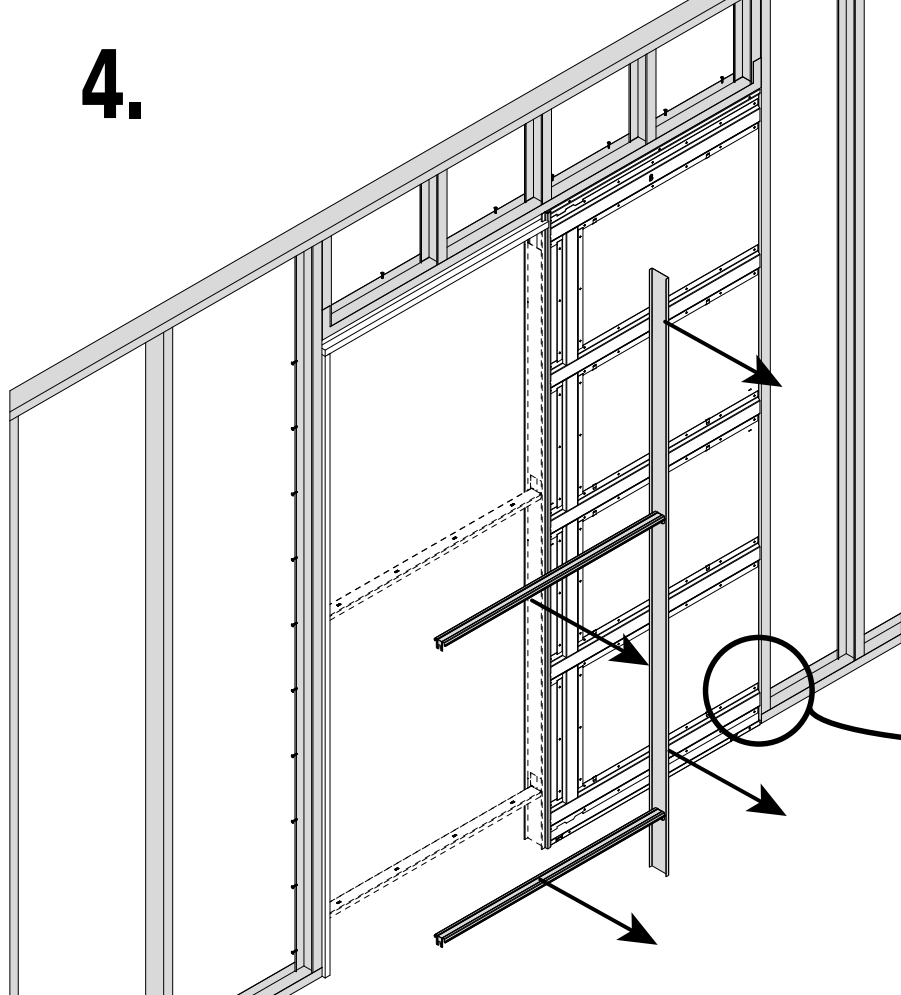


5.

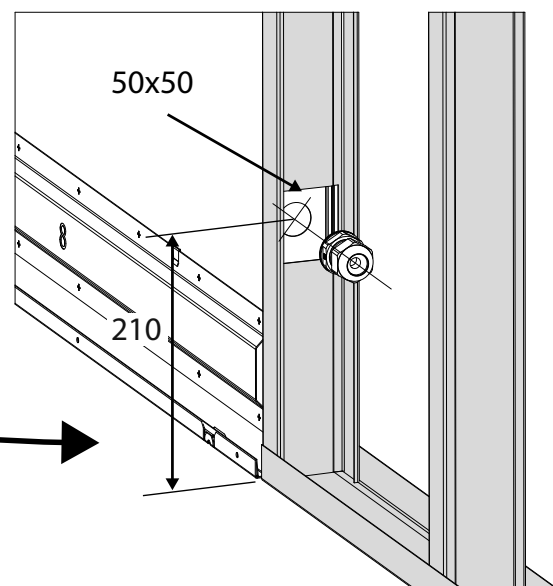


5.1

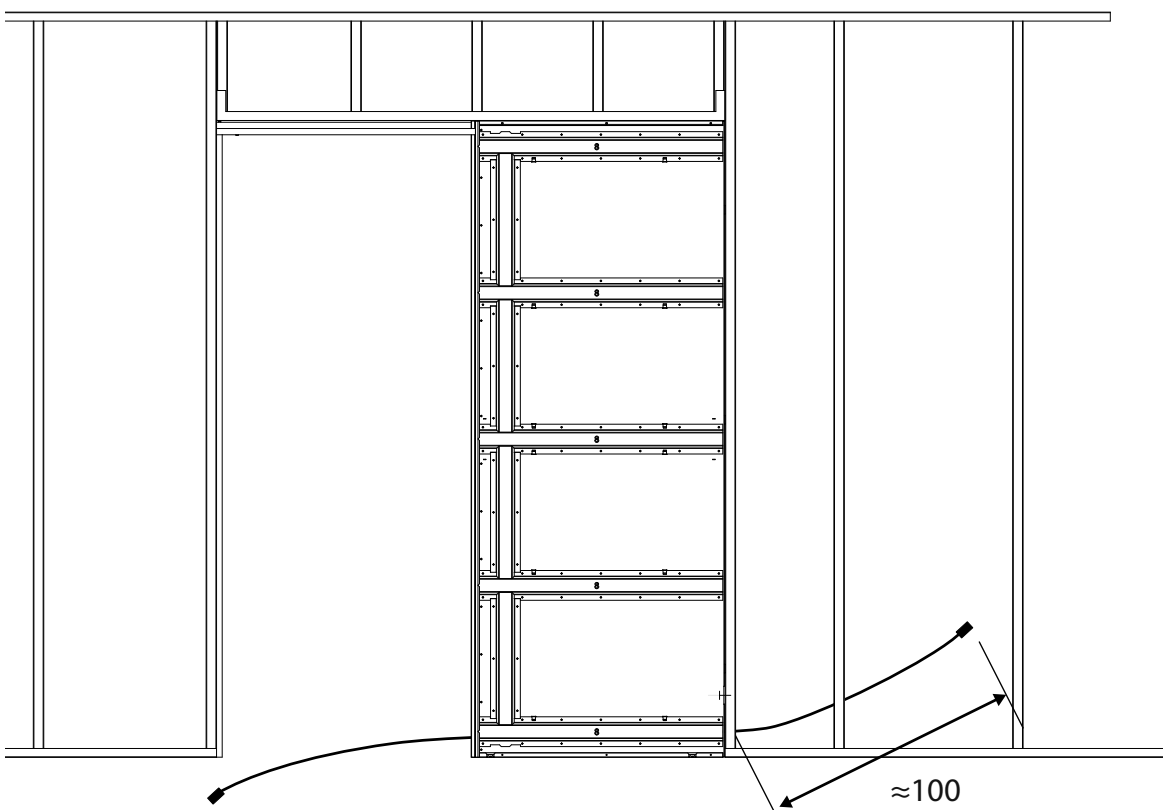


5.2

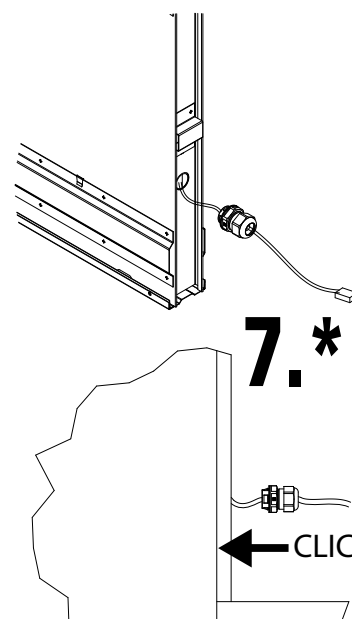

6.

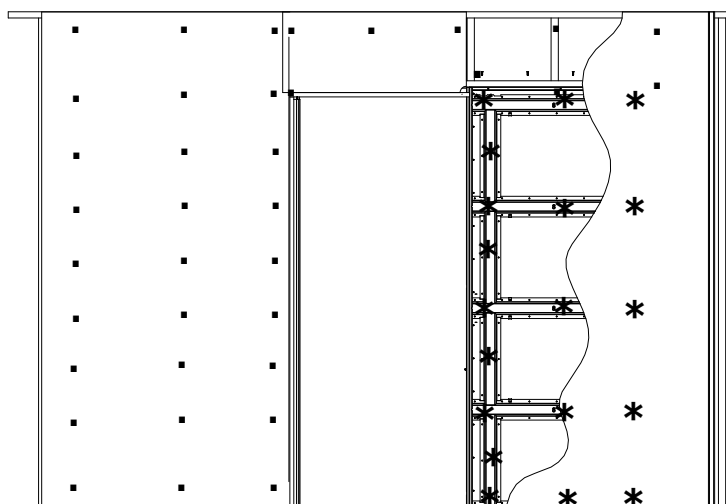

E x50

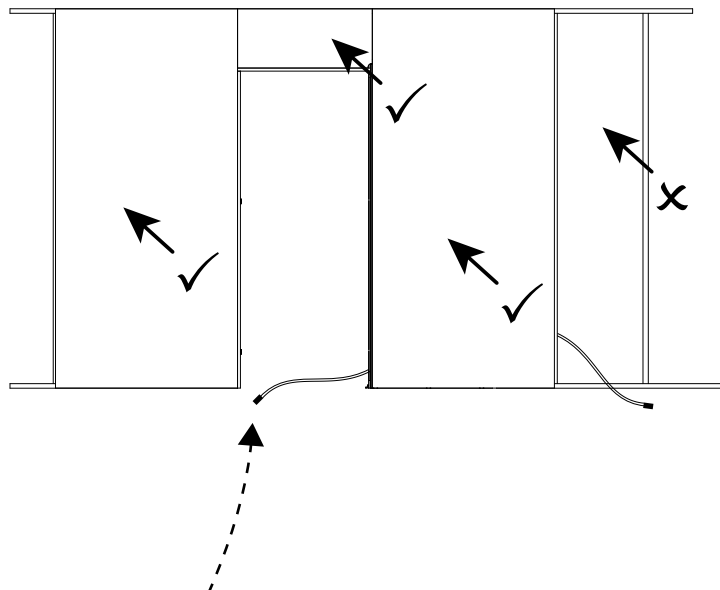

6.1




IMPORTANT: Retirer intégralement les cales collées à l'intérieur du caisson.

WICHTIG: Take back all the wedges fixed inside the frame.


WARNING: Anheben die ganze beklebt Keile in dem Rahmen.

IMPORTANTE: Quitar integralmente los calces pegados en el interior del cajón.


7.

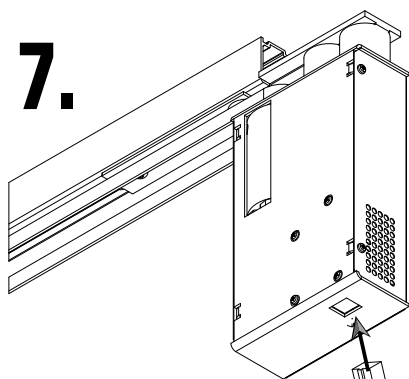


7.1

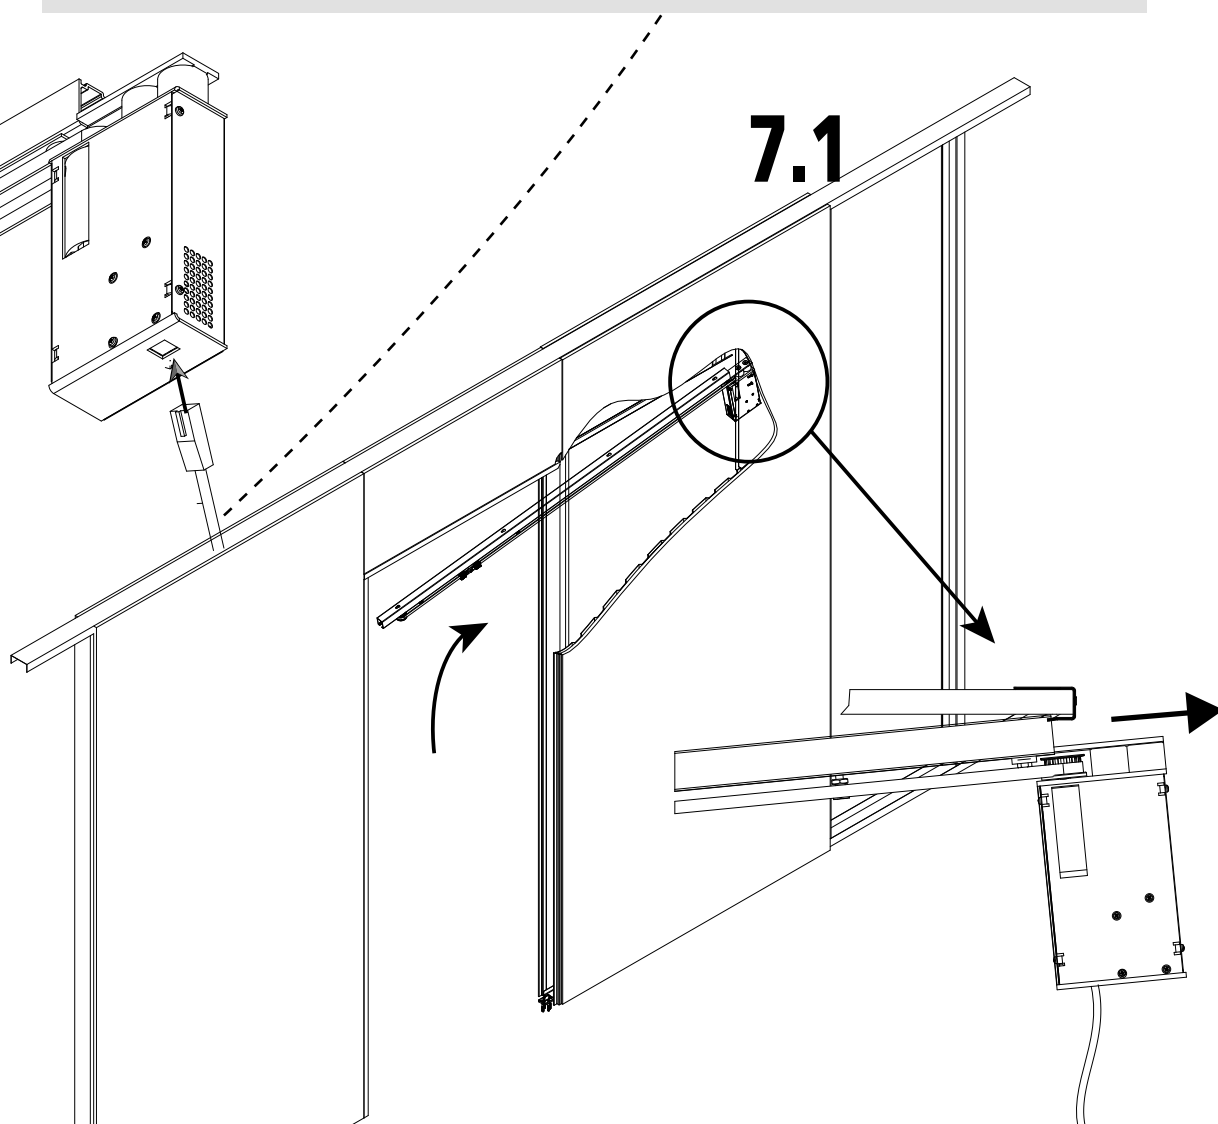


8.

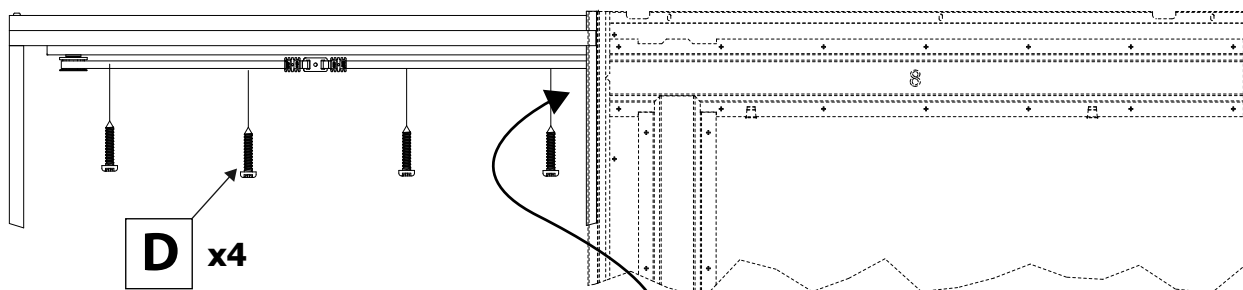


9.

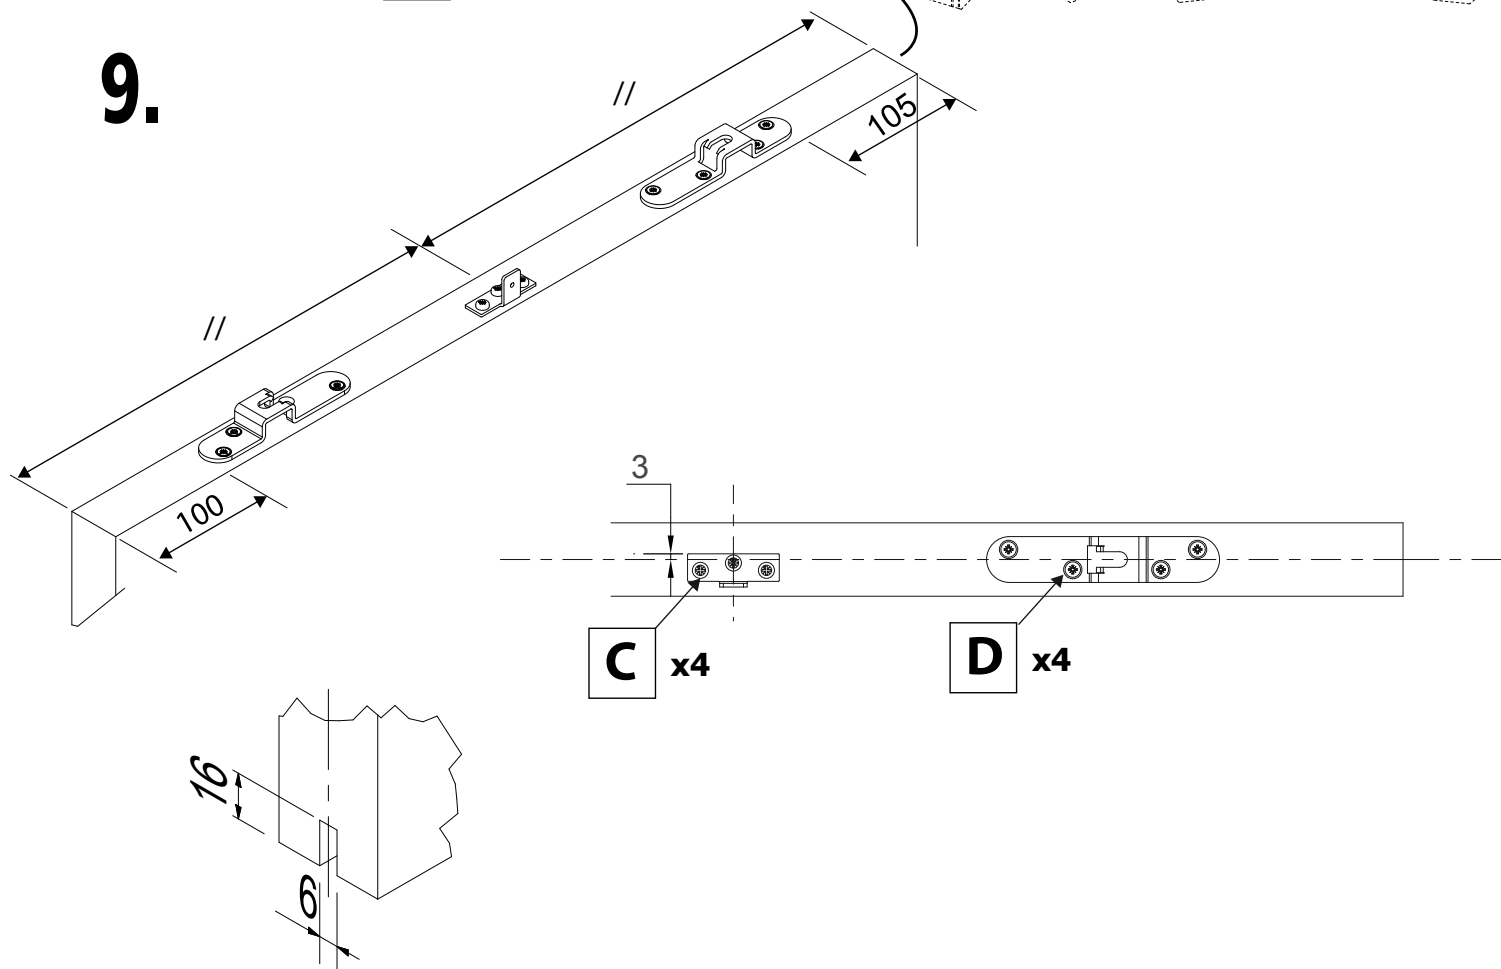

10.

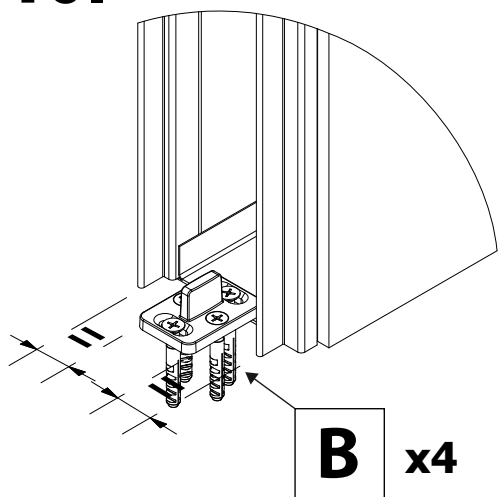

11.

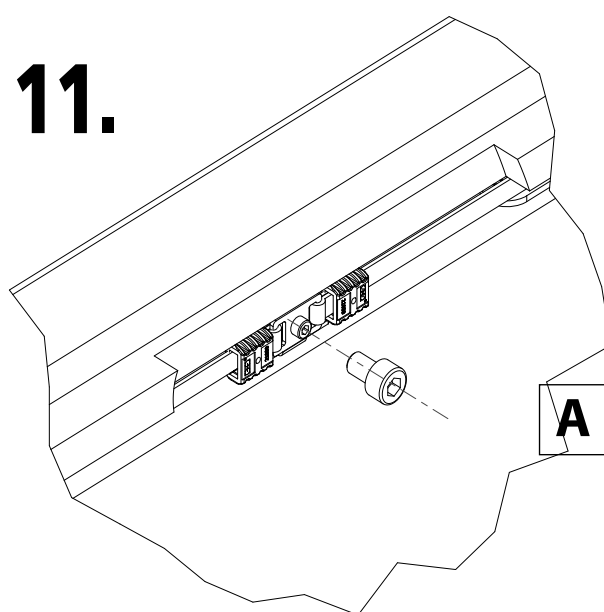

12.

